


Berekenen NO_x

NO_x Cálculo


NO_x le Calcul



NO #4	NO ₂ #3	Berekenen NO _x NO _x Cálculo NO _x le Calcul	NO _x = ?	
		UIT AAN	n.v.t. NO _x ≈ NO x 1,05	* * * ppm 123 ppm
		UIT AAN	NO _x = NO + NO ₂	123 ppm

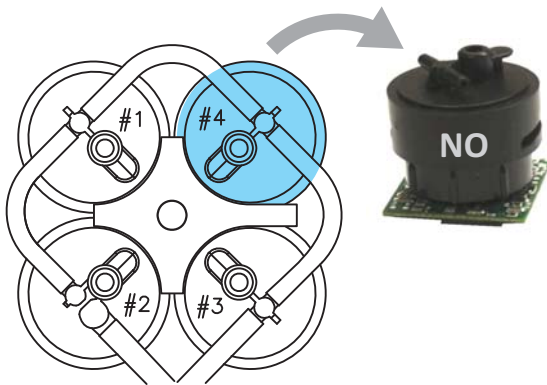


Menú de Instalación
Menu d'Installation

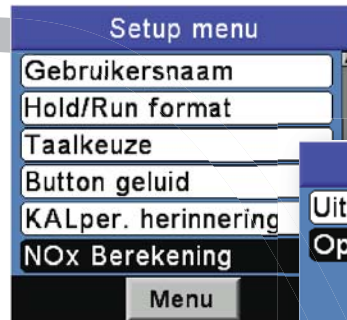

NO_x Cálculo
NO_x le Calcul



Encendido
Sur

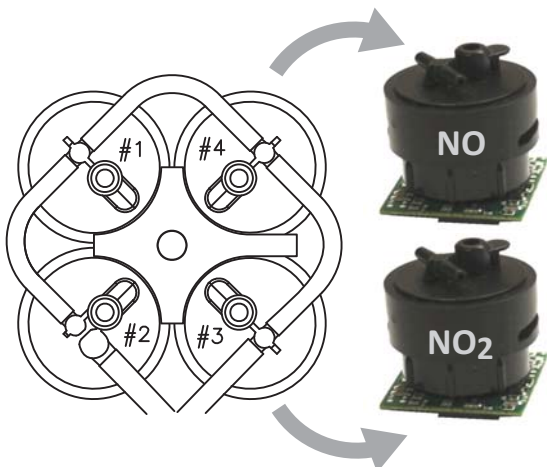

NO_x ≈ NO x 1.05

NO_x123 ppm

NO_x = NO + NO₂